



Quick Start Guide

 
 
 
 


- 1 Connect
- 2 Set up
- 3 Enjoy

What's in the box?



Digital Video Recorder

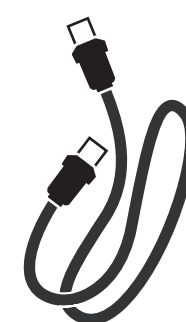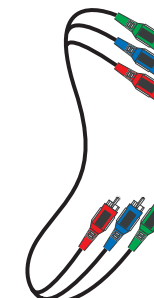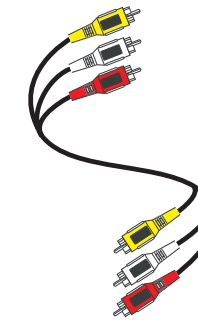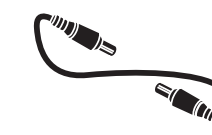Remote Control
and 2 batteriesRF antenna cable
(connect between
recorder and TV)Component
video cableAudio/Video
cableAntenna
interconnected
cableUser
Manual

Start Recording

A Recording the programme you are watching

- 1 Press **P +/-** to scroll through the channels that you want to record.
- 2 Press **REC** to start recording.
- 3 To end recording, press **STOP**.

B Recording TV from GUIDE (Electronic Programme GUIDE)

- 1 Press **GUIDE** to display the seven channel programme list covering a two hour period.

Electronic Program Guide 2005 13.12 Tue 10:33						
HELP						
13.12 Tue	10:30	11:00	11:30	12:00	12:30	
ABC	TV Sydney	ABC-HDTV	ABC TV	ABC 2		
Seven						
Nine						
Ten						
SBS	Help					
	Record	+24 Hour	+24 Hour			
	OK	Program Info				
	BACK	EXIT				
ABC	TV Sydney					

- 2 Press cursor **▲ ▼** keys to select a current TV broadcast or future programme.
- 3 Press **RED** button to start recording.

Start Playback

- 1 Press **HDD** and { **HDD List** } screen will appear.
- 2 Press cursor **▲ ▼** keys to scroll through the HDD List that you had recorded before.
- 3 Press **OK** to sub menu appears. Select one of the options and press **OK**.

{ **Close** }

Turn off the menu.

{ **Play** }

Plays the selected title.

If you select after you stop playback, playback starts from the point where you stopped (Resume Play).

{ **Play Beginning** }

Plays from the beginning of the title.

{ **Repeat Play** }

Plays the selected title repeatedly.

{ **Protect** }

To protects a title.

{ **Delete** }

To delete the title from HDD List.

HDD List 190 / 250GB			
Help Rename Sort			
No.	Status	Viewed	Program Name
1			Nine Digital
2	NEW		Channel 7
3			Nine Digital
4	NEW		Nine Digital
5			Nine Digital
Channel 7			
File Information			
Date 23 Nov			
Time 02:00			
Length 03:30			
Size 0.2 GB			
HD/SD HD			

Need help?

User Manual

See the user manual that came with your Philips recorder.

Online

Go to www.philips.com/support.



2007 © Koninklijke Philips N.V.
All rights reserved.

12 NC 3139 245 XXXXX
www.philips.com

 
PHILIPS

1 Connect

Before connecting

Select the most suitable connection (Options in **B**) based on your home set up. Refer to the accompanying User Manual for other possible connections.

A Connecting Recorder and TV

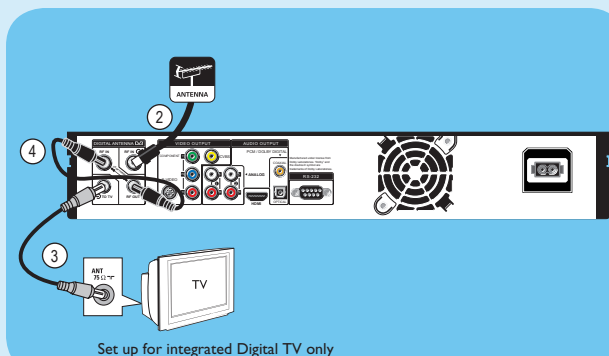


- 1 Unplug the antenna cable that is currently connected to your TV.
- 2 Connect the antenna cable into the **Digital Antenna Input** socket on the recorder.
- 3 Connect the **To TV Antenna** socket with RF antenna cable to the Antenna In Socket on the TV.

Helpful Hints :

Use the best quality AV connectors (CVBS/S-Video/Component Video/HDMI), not the RF connections from this recorder to the television, to achieve the best video quality.

- 4 Loop through between **RF IN** and **RF OUT** with supplied antenna interconnected cable.

B Connecting the Video/Audio Cables

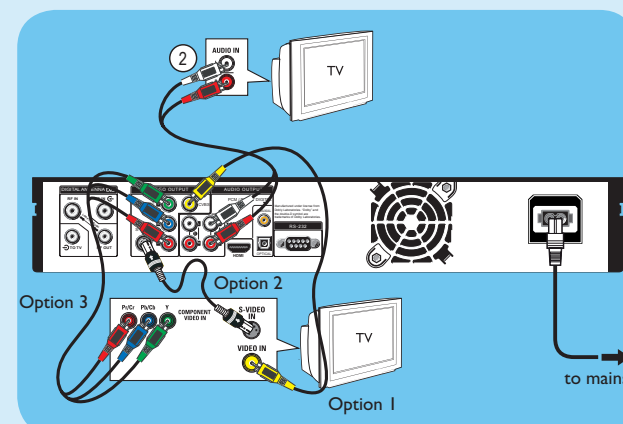

- 1 You can choose one of the options to make your video connection.

Option 1

– Use the composite video cable to connect the **Video Output-CVBS** socket on the recorder to the video input socket on the TV

Option 2

– Use the S-Video cable to connect the **S-Video** socket on the recorder to the S-Video input socket on the TV

Option 3

– Use the component video cables to connect the **Video Output-COMPONENT-Y Pb Pr** sockets on the recorder to the corresponding component video input sockets on the TV

Note If you have a HDMI TV, connect the HDMI cable from the recorder to your HDMI TV set. See the chapter “Basic Connections – Connecting to a HDMI compatible TV” in the accompanying user manual.

- 2 Use the audio cable to connect the **Audio Output- L/R 1 or 2** sockets to the audio input sockets of the connected device.
- 3 Connect the power cable from the recorder to an AC power outlet.

 
For additional connection diagrams, see the accompanying User Manual.

2 Set up


A Quick Setup

Use the recorder's remote control and follow the on-screen instructions to complete the setup.

- 1 Press **Power** to turn on the recorder.
- 2 Switch on the TV set and the Quick Setup menu is displayed.
- 3 In case, you don't see the recorder's Quick Setup menu, press **MENU**, then select {Quick Setup} and press **OK** to enter the setup screen.

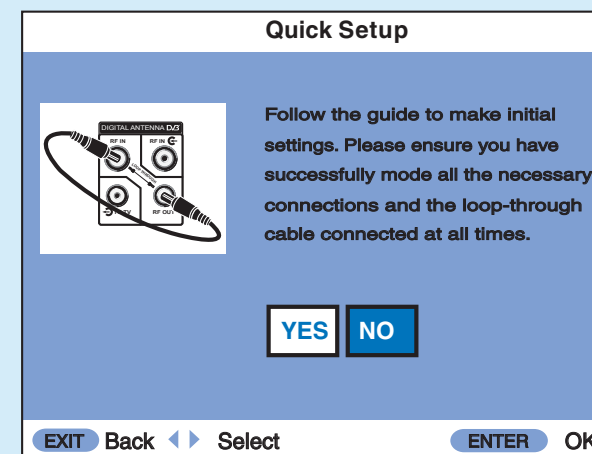

- 4 You can follow the guide which will help you throughout the process.
- 5 Select {**YES**}, and press **OK**.
- 6 When the Time Zone screen appears, select your time zone and press **OK**.
- 7 Select the channel search mode and press **OK**.
- 8 If you select { **Quick Channel Search** } select your city and press **OK**.

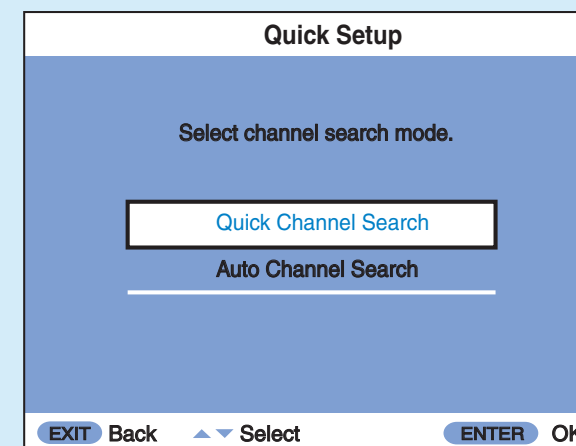

- 9 The Quick Setup is completed now, press **OK** to close the menu.

3 Enjoy

Watching TV

A Watching TV from Channel List

- 1 Press **CH List** and select the channel you want to watch by using cursor **▲ ▼** keys.

Program List	
No.	Channel Name
0020	ABC HDTV
0021	ABC2
0022	ABC TV
0200	ABC DIG Radio
0201	ABC DIG Jazz
0007	7 Digital
0070	7 HD Digital

▲▼ Select ENTER OK

- 2 Press **OK** to watch your selection channel

B Watching TV from GUIDE (Electronic Programme GUIDE)

- 1 Press **GUIDE** to display the seven channel programme list covering a two hour period.

Electronic Program Guide			2005 13.12 Tue 10:33		
			● HELP		
13.12 Tue	10:30	11:00	11:30	12:00	12:30
ABC	TV Sydney		ABC-HDTV	ABC TV	ABC 2
Seven					
Nine					
Ten					
SBS	Help				
	● Record ● -24 Hour ● +24 Hour				
	OK : Program Info				
	BACK : EXIT				
ABC	TV Sydney				

- 2 Press cursor **▲ ▼** keys to select a programme and press **OK**.